


Changing Filters




1. **IF** you have an Under Counter Unit, turn water valve **OFF**. **Open faucet to release water pressure**. You should have enough tubing to pull filter out from under the sink to work comfortably.

2. Place water filter in a dish pan or container to catch water when opened. Place wrench over housing to open.

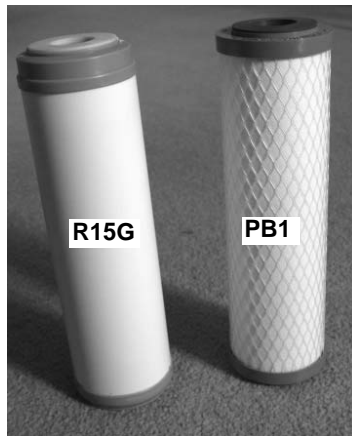

3. Replace primary cartridge (white hard plastic cartridge that the water goes through first) with LSI Model #R15G after two years and every other year thereafter. Notice the white rubber gasket on the R15G cartridge (the hard white plastic one). As you place the R15G cartridge into the housing, you should see the white gasket. The white gasket is at the same end as the black "O" ring inside the housing.

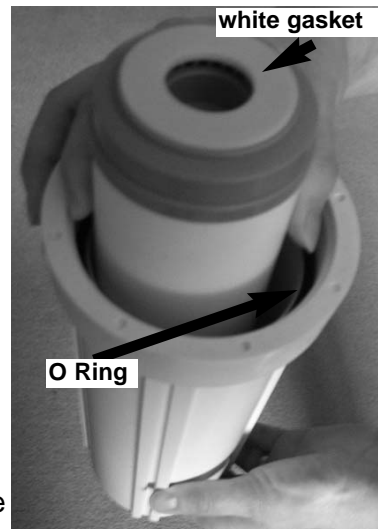

4. Replace secondary cartridge (carbon block with white mesh covering that the water goes through second) with LSI Model PB1 cartridge each year.

5. If flow becomes severely restricted, you may need to change the secondary cartridge sooner. If sediment (dirt, grit, etc.) is a problem, call the factory, you may require a sediment pre-filter or third housing.

6. Be sure "O" rings are seated properly before reassembly. Applying a little petroleum jelly will make them stay in place.

7. After installing new filters, always run water through unit for at least five minutes before use.

Lakota Scientific Inc. 1-800-945-5782
www.lakotascientific.com